

## BAMBOO INSTALLATION GUIDE

### Read completely before starting installation

All installed boards will be considered as accepted by the installer and/or homeowner. Any defects should be reported to the retailer immediately for inspection and/or replacement. We cannot accept responsibility for flooring installed with visible defects.

### General precautions

INOVAR flooring products are inspected for quality before packaging and shipping. Nevertheless, a final jobsite inspection of your flooring should be performed for grade, colour, finish and quality.

Ensure adequate lighting for proper inspection. Room temperature and humidity of the installation area should be consistent with normal, year-round living conditions for at least a week before installation.

Room temperature of 18°-30°C and a humidity range of 40-70% is recommended. It is most important that you install the flooring immediately after you open the cartons, without waiting for several hours or days. Do not store directly on concrete or near outside walls.

### General installation notes

ALL BAMBOO FLOORS REACT TO HUMIDITY AND MOISTURE. It is the responsibility of the installer and the owner to install an effective moisture barrier and to maintain correct moisture and humidity percentages.

- The humidity of a room can vary due to many factors – the change of seasons for example. The floor must be able to expand and contract in all directions.
- This bamboo flooring is of natural origin and may have slight variations in shade and grain. It should be installed from several cartons at the same time to ensure good colour and shade mixture.
- When possible, pre-select and set aside boards that blend best with all floor beadings, skirting boards or mounted mouldings used to assure a uniform final appearance. Install these boards adjoining the mouldings.
- Be attentive to staggering the ends of boards in adjacent rows. They should be staggered at mid point when the boards are of equal length.
- Any installation requiring the flooring to exceed 5 meters in width or 12 meters in length will require an expansion or T- moulding. All doorways and adjoining rooms should have expansion joints.
- Always allow a minimum 14mm expansion around all vertical obstructions.
- It is recommended that drywall (gyprock) be undercut to allow further expansion if required.

### Subfloor heating

INOVAR BAMBOO IS NOT SUITABLE FOR FLOORS WITH UNDERFLOOR HEATING.

### Subfloor preparation

#### CONCRETE

1) Ensure that your subfloor is dry, clean, flat, smooth and level. Height differences of more than 3mm +/- over 3 meter must be levelled.

Correct any changes in height difference and ensure that the levelling compound has cured prior to starting your installation.

2) Lay INOVARLAY Underlay, taping the edges together using wide adhesive tape.

#### WOOD AND OTHER SURFACES

1) Ensure that your subfloor is dry, clean, flat, smooth and level. Height differences of more than 3mm +/- over 3 meter must be levelled.

# INOVAR FLOOR

Longer Life. Lasting Impressions.



Correct any changes in height difference and ensure that the levelling compound has cured prior to starting your installation.

2) Lay INOVARLAY Underlay (or another approved underlay) taping the edges together using wide adhesive tape, but do not overlap the edges.

## Preparing to install

- 1) Clean and sweep.
- 2) Let the opened packages of flooring lie flat on the floor in the room in which the floor is to be installed.
- 3) Check door and door frame clearances to ensure that doors will move freely without contacting the bamboo surface.
- 4) Although an INOVAR Bamboo floor can be installed in any direction, as a rule, bamboo floors are usually installed perpendicular to a window. Installing the floor parallel to the longest wall tends to make a room appear larger. You will get better results by laying two or three rows of INOVAR Bamboo in advance to get an eye pleasing distribution of the plank.

## Installation


- 1) Measure the room carefully to determine if it is square, and to calculate the width of the last row. For planks less than 50mm in width, re-cutting the first row will be necessary to ensure stability (do not include the tongue of a plank in your measurements, as all exposed tongues must be removed from the perimeter of the floor – i.e. the first row of planks). Should you have an irregular wall for the first row, the plank must be cut to follow the wall's irregularities.
- 2) When preparing to saw a plank (use safety glasses), always ensure that the decorative surface of the plank is facing down.
- 3) Starting in one corner of the room, the flooring should be installed from left to right, with the tongue sides facing the walls. Place spacers between the plank and the wall (spacers provide the necessary space required for expansion around the perimeter of the floor). It is especially important to leave at least 14mm free around the entire floor. To ensure stability, the planks at the end of each row must not be shorter than 300mm. If your last plank is shorter than 300mm, it is advised to re-cut the first plank in the row. The remainder of the plank from your first row can be used as the first plank of the next row. Stagger the planks by cutting the first plank of every other row in half. The pattern will then be repeated until the opposite wall is reached.
- 4) When laying the planks for the first row, place the first plank flat and against the spacers. The next plank being laid can be laid by locating the short side lock of the second and first boards and laying flat or folding downward. This can be continued on all subsequent boards in this row.
- 5) INOVAR Bamboo has a "drop lock profile" which is great for DIY. Every board is easily installed by simply locating the long side locks on the current and previous corresponding row and "drop" down so the short side locks join. Therefore, for the second and consecutive rows, simply locate the long side at a slight angle to the previous row to allow the lock to slip into the groove, locating directly above the short side lock and fold down until flat.
- 6) When you reach the final row, place a loose panel precisely on the last laid panel. Place another panel on top, but with its edge 14mm from the wall. Trace a cutting line along the middle panel and saw it along that line.
- 7) Lay the panel you cut and ease it into position. Insert spacers between the wall and the last panel laid to be sure there is a 14mm expansion gap.
- 8) When going from one room to the other, make sure to separate the rooms with a transition moulding. The floor is ready for use as soon as it is laid.

# INOVAR FLOOR

Longer Life. Lasting Impressions.



## VISUAL GUIDE (Note not all points covered)

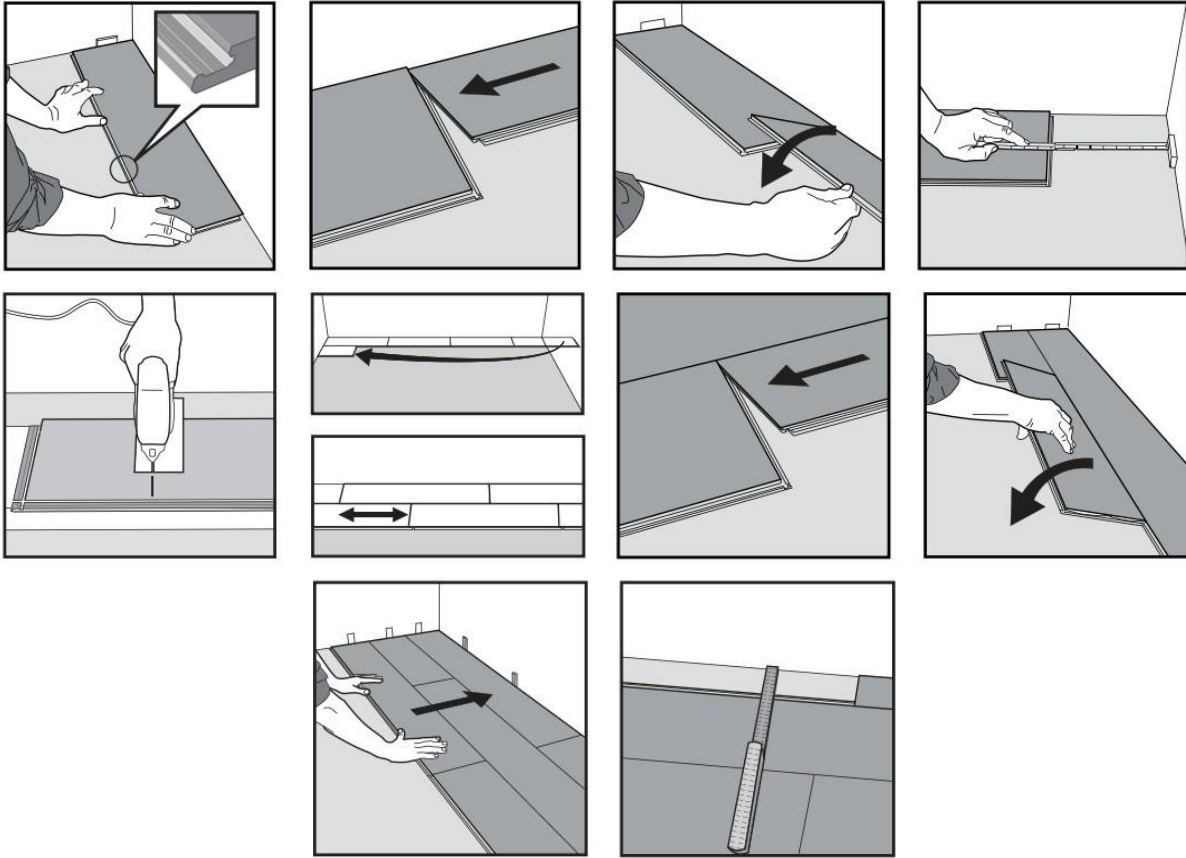

## Finishing

- 1) Remove the spacers.
- 2) Cover the expansion joints around the perimeter of the floor with baseboard mouldings and/or quarter rounds. If a vapour barrier was used, do not forget to fold the polyethylene film along the edge of the walls under the baseboards and/or quarter rounds. Fit these products to the walls without attaching them to the floor.
- 3) Install the T-mouldings to hide the expansion gaps where needed (doorways, more than 5 meters, etc.).
- 4) Any remaining boards can be kept for several years, stored flat in a moisture-free area. Furniture can be put back in position right away.

## Maintenance

- Sweep or vacuum as often as necessary to remove any loose dirt or grit.
- Use protective mats at all exterior entrances. Do not use rubber-based mats as the rubber may leach into the bamboo.
- Use felt protectors under heavy pieces of furniture.
- Never slide or roll furniture or appliances across your floor. Protect the surface if using a trolley to move heavy objects.
- Spiked heels or shoes in need of repair can severely damage your floor. In areas of excessive traffic and wear, make use of runners or area rugs.
- Damp mop only – avoid excessive amounts of water. Steam mops must not be used. If a spill occurs, soak up the bulk liquid promptly.
- Never use oil, soap, wax or other household products to clean your floor.
- Keep animal nails trimmed.
- Maintain relative humidity levels between 40% and 70%.